 
 


## Incoming Sections

 
## Outgoing Devices Services

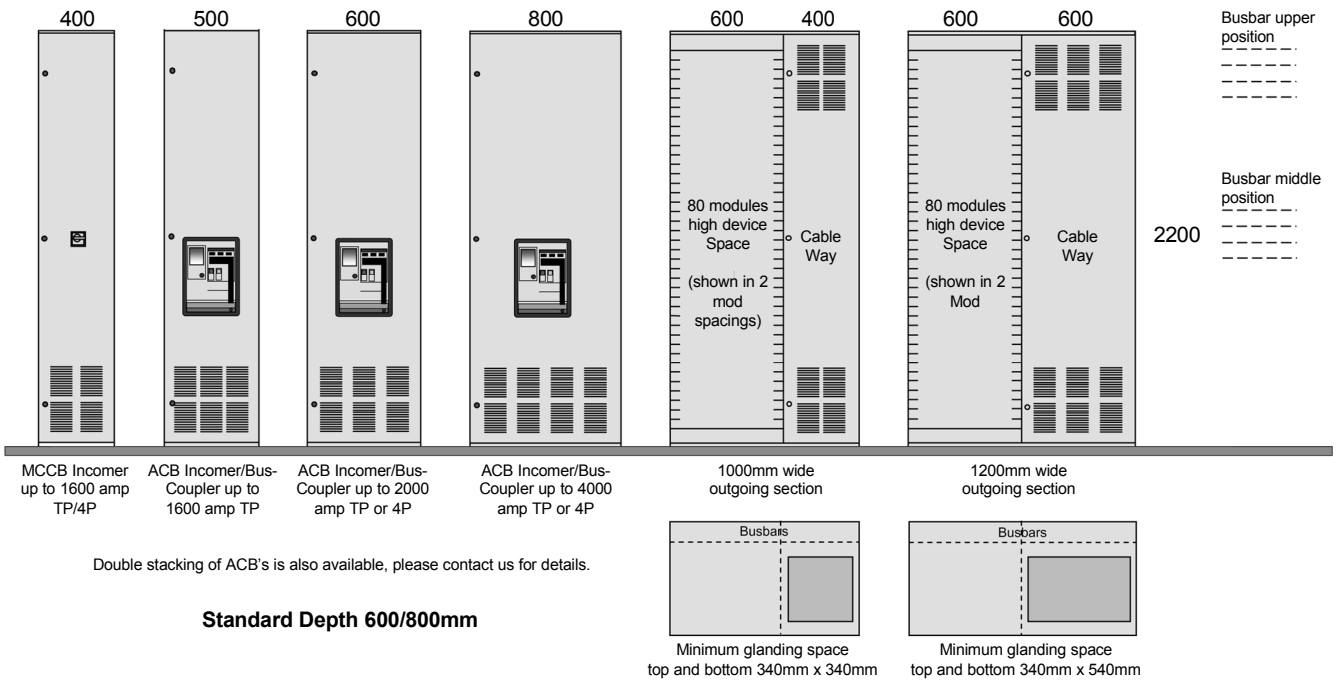


### Fuseswitches (BS88)

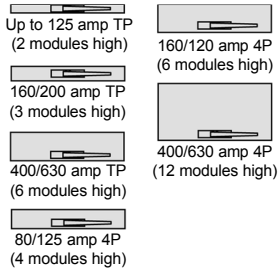

### MCCB's

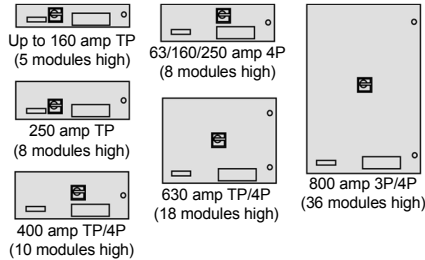

### Motor Starters

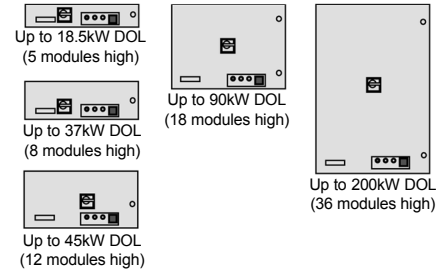 

Starter sizes are for guidance purposes only. For star-delta and reversing starters, please refer to full listing. For more complex arrangements please contact us.

All devices are plug-in.

When adding outgoing devices take into account the outgoing cable sizes and the quantity of cables in relation to the cable glanding area.

Outgoing sections are top and bottom entry.

Unused space is filled with plain doors or covers.

For low current rated switchboards, any device can be used as an incomer within the outgoing section.


Fuseswitches can be fitted with internally mounted CT's for metering.

Now available up to 6300 amps - call us for details

**Call 020 8362 0226**
 
## PFC Sections

## General Purpose Cubicles

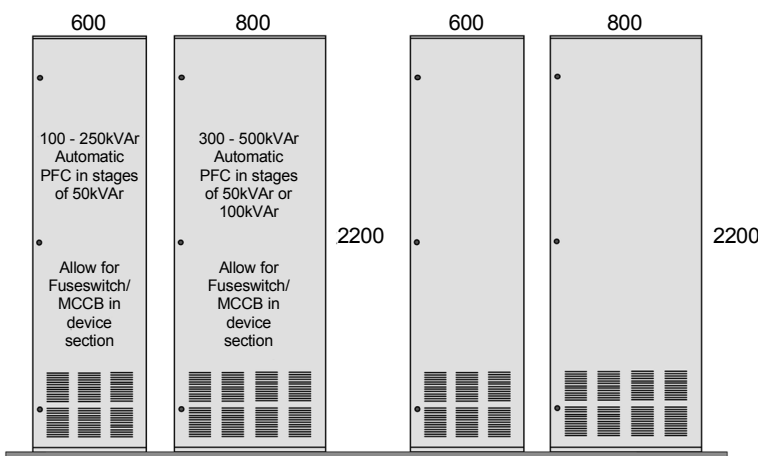

PFC and General Purpose cubicles can include main bus-bar therefore can be positioned in an intermediate position within the switchboards arrangement